PATCHWORX

THE EASIEST SOLUTION TO REPAIRS

Patchworx is a pliable, fiberglass reinforced polyester, UV curing material. There are hundreds of uses and it is easy to use.

LCDM is the perfect place to order your Patchworx products. We offer small, medium and large patches to suit your repair needs. We deliver fast, and all of our Patchworx products are highly affordable. Be prepared for sudden emergencies by ordering in bulk.

APPLICATIONS

- » GRAIN BINS
- » ELEVATOR TRUNKING
- » METAL BUILDINGS
- » AUTOMOTIVES
- » TOOLS
- » MUCH, MUCH MORE!


KEY ADVANTAGES

- » EASY TO USE
- » CAN BE SANDED, PAINTED, OR DRILLED
- » CUT TO SIZE
- » 200-500 PSI RATING
- » SAFE FOR SKIN
- » CURES IN MINUTES
- » STICKS TO MOST HARD SURFACES
- » TEMPERATURE RANGE AFTER CURING IS FROM -40°F TO +392°F



SCAN THE QR CODE TO LEARN MORE OR CONTACT US.

LCDMcorp.com

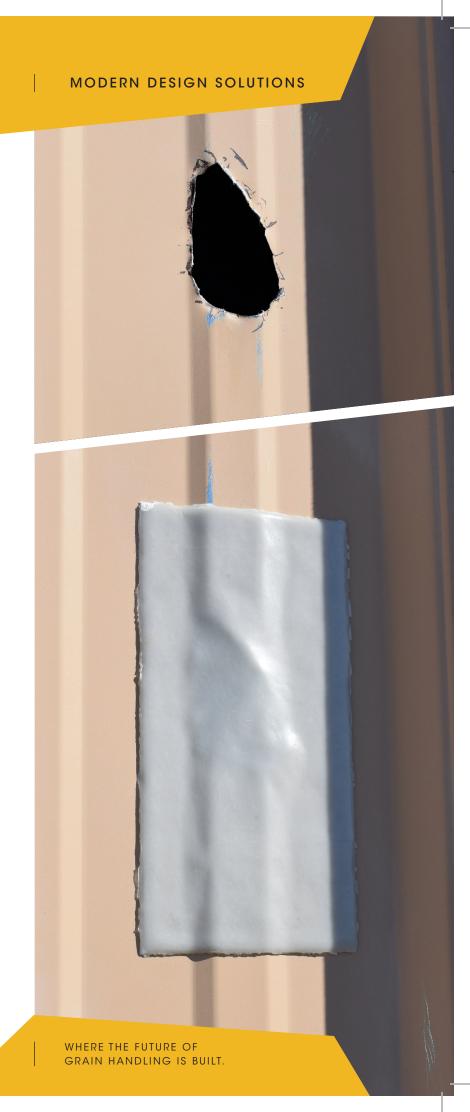

PATCHWORX

A grain distribution or other material handling business is part of a rugged industry with demanding industrial conditions. While sheet metal is one of the most durable materials for grain bins, it still endures significant daily wear and tear. This being the case, you don't want to pay for extensive repair or replacement any time a bin, tool or part of your building is damaged.

Rust is one of the primary causes of damage to sheet metal. Sheet metal can also develop holes due to accidents, weak spots or poor maintenance. Regardless of the type of damage, there are several options for patching or repairing these holes effectively.

Patchworx is an instant metal repair patch that is durable, flexible and waterproof. Patchworx will not rot or rust. Once applied and exposed to ultraviolet (UV) light, it starts to harden like steel within five minutes of activation. Save money and time by using Patchworx.


PATCHWORX REPAIR PATCHES ARE AVAILABLE IN THREE SIZES:

- » SMALL PATCH: 3 INCHES BY 6 INCHES
- » MEDIUM PATCH: 6 INCHES BY 9 INCHES
- » LARGE PATCH: 9 INCHES BY 12 INCHES

CALL OR VISIT US ONLINE FOR PRICING

SIMPLE STEPS FOR APPLYING THE PATCHWORX UV REPAIR PATCH

- 1. CLEAN THE AREA TO BE PATCHED WITH A RAG AND WATER.
- CUT THE PATCHWORX REPAIR MATERIAL TO FIT THE DAMAGED AREA AND PEEL TO REVEAL THE ADHESIVE BACKING.
- 3. APPLY THE MATERIAL EVENLY TO THE DAMAGED AREA AND APPLY HEAVY PRESSURE.
- 4. FOR CURING THE REPAIR PATCH, SIMPLY EXPOSE TO SUNLIGHT OR APPLY UV RAYS DIRECTLY FOR ABOUT FIVE MINUTES.

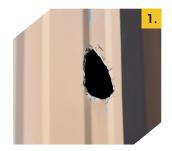







LEARN MORE ABOUT OUR OTHER SERVICES



CUSTOM GRAIN FLOW PRODUCT DESIGN



GRAIN FLOW FACILITY ENGINEERING



GRAIN FLOW DISTRIBUTION

LOCATIONS

22394 US HWY 136 MEMPHIS, MO 63555

871 RANGE END RD, DILLSBURG, PA 17019

CONTACT US TODAY

(888) 963-9145 contact@LCDMCORP.com



ENGINEERED
GRAIN HANDLING